

DTC P1114	Engine Coolant Temperature (ECT) Sensor Circuit Intermittent Low Voltage
DTC P1115	Engine Coolant Temperature (ECT) Sensor Circuit Intermittent High Voltage
DTC P1121	Throttle Position (TP) Sensor Circuit Intermittent High Voltage
DTC P1122	Throttle Position (TP) Sensor Circuit Intermittent Low Voltage
DTC P1133	HO2S Insufficient Switching Sensor 1
DTC P1134	HO2S Transition Time Ratio Sensor 1
DTC P1336	Crankshaft Position (CKP) System Variation Not Learned
DTC P1351	Ignition Coil Control Circuit High Voltage
DTC P1352	Ignition Bypass Circuit High Voltage
DTC P1361	Ignition Control (IC) Circuit Low Voltage
DTC P1362	Ignition Bypass Circuit Low Voltage
DTC P1374	Crankshaft Position (CKP) High to Low Resolution Frequency Correlation
DTC P1380	Misfire Detected - Rough Road Data Not Available
DTC P1381	Misfire Detected - No Communication with Brake Control Module
DTC P1404	Exhaust Gas Recirculation (EGR) Closed Position Performance
DTC P1441	Evaporative Emission (EVAP) System Flow During Non-Purge
DTC P1546	Air Conditioning (A/C) Clutch Relay Control Circuit
DTC P1554	Cruise Control Feedback Circuit
DTC P1585	Cruise Control Inhibit Output Circuit
DTC P1626	Theft Deterrent Fuel Enable Signal Lost
DTC P1629	Theft Deterrent Fuel Enable Signal Not Received
DTC P1630	Theft Deterrent Learn Mode Active
DTC P1631	Theft Deterrent Start Enable Signal Not Correct
DTC P1635	5 Volt Reference 1 Circuit
DTC P1637	Charging System Lamp Control Circuit
DTC P1639	5 Volt Reference 2 Circuit
DTC P1640	Control Module Output A Circuit
DTC P1650	Control Module Output B Circuit
DTC P1653	Low Engine Oil Level Lamp Control Circuit
DTC P1660	Control Module Output C Circuit
DTC P1663	Change Engine Oil Lamp Control Circuit
DTC P1670	Control Module Output D Circuit
DTC P1673	Engine Coolant Temperature Lamp Control Circuit
DTC P1810	TFP Valve Position Switch Circuit
DTC P1811	Maximum Adapt and Long Shift
DTC P1814	Torque Converter Overstressed
DTC P1860	TCC PWM Solenoid Circuit Electrical
DTC P1887	TCC Release Switch Circuit
DTC U1000 and U1255	Class 2 Communication Malfunction
DTC U1001-U1254	Lost Communication with XXX
DTC U1300, U1301, or U1305	Class 2 Data Link Shorted