

**Master Electrical Component List**

| Name        | Location  |
|-------------|---|
| G100        | (CKT 50) Right side of the engine compartment, at the base of the battery                                       |
| G101        | (CKT 1350) Left side of the front end upper tie bar, near the headlamp  |
| G111 (3.8L) | (CKT 51) Right side of the engine, on the ignition control module bracket                                       |
| G113        | (CKT'S 50, 451) (and CKT 51 on 3.1L)<br>Lower left front of the engine, on the transaxle stud, near the starter |
| G117 (3.1L) | (CKT 1050) Lower left front of the engine, on the transaxle stud, above the starter                             |
| G117 (3.8L) | (CKT 1050) Lower left front of the engine on transaxle stud, near the starter                                   |
| G119        | (CKT's 250, 1650) Left side of the engine compartment, at the base of the left strut tower                      |
| G200        | (CKT'S 150, 1450, 1550) Right side of the IP cross beam, behind the fuse block                                  |
| G201        | (CKT 351) Below the IP, on the right side of the steering column, on the steering column support                |
| G205        | (CKT's 251, 1751) Left side of the IP, at the base of the steering column                                       |
| G301        | (CKT 750) Inside the left door sill, forward of the left front seat   |
| G302        | (CKT 350) Right door sill, forward of the right front seat  |

**G100 - G302**