

Fuse Block - IP (Label)

| FUSE USAGE CHART | | | See Underhood Electrical Center For Spare Fuses | | |
|------------------|------------------|----------------------|---|-----------------------|------------------|
| CIRCUIT BREAKERS | | | MALL PGM 10 A | MALL 10 A | WIPER 25 A |
| | HEADLAMP 20 A | STR WHL ILLUM 2 A | STR WHL CTRL 2 A | SUNROOF 20 A | RADIO 10 A |
| | SEAT 20 A | | RADIO AMP 20 A | HSEAT/LUM 15 A | R DEFOG 30 A |
| | | PASSKEY III 10 A | RAP 10 A | HAZARD 15 A | PWR MIR 10 A |
| | | CIG LTR 15 A | INT LAMP 10 A | STOP LAMP 15 A | ONSTAR 15 A |
| | PWR WDO 25 A | ECM 10 A | CRUISE 10 A | I/P-IGN 10 A | SIR 15 A |
| | | | | | TURN 10 A |
| | | | | | BTSI 10 A |
| | | | | HVAC CTRL 20 A | DIC/HVAC 10 A |
| | | | PWR DROP 10 A | CANISTER VENT 10 A | DRL 10 A |

For More Information, See Owner's Manual

10422841

801990

Fuse Block - IP (Label)