

**Fuse Block - IP (Application Table)**

Fuse/Circuit Breaker	Rating	Description
BTSI Fuse	10A	Instrument Panel Cluster (IPC), Stoplamp Switch, Automatic Transmission Shift Lock Actuator
CANISTER VENT Fuse	10A	Evaporative Emission (EVAP) Canister Vent Solenoid
CIG LTR Fuse	15A	Data Link Connector (DLC), Accessory Power Outlet - Console, Cigar Lighter, Auxillary Power Drop Connector
CRUISE Fuse	10A	Cruise Control Module (CCM), Cruise Control Release Switch, Cruise Control On/Off Switch
DIC/HVAC Fuse	10A	Heated Seat Switch - Driver, Driver Information Center (DIC) (W/U40), Daytime Running Lamps (DRL) Control Module, Rear Window Defogger Relay, Air Temperature Actuator - Left, Air Temperature Actuator - Right, HVAC Control Module
DRL Fuse	10A	Daytime Running Lamps (DRL) Control Module
ECM Fuse	10A	IGN Main Relay Coil, Powertrain Control Module (PCM), Theft Deterrent Control Module
H SEAT/LUM Fuse	15A	Heated Seat Control Module - Driver, Seat Lumbar Switch - Driver,
HAZARD Fuse	15A	Turn Signal Switch
HEADLAMP Circuit Breaker	20A	Headlamp Switch, Daytime Running Lamps (DRL) Control Module
HVAC CTRL Fuse	10A	HVAC Control Module
HVAC HI Fuse	30A	Blower Motor Resistor Assembly
INT LAMP Fuse	10A	Body Control Module (BCM)
IP IGN Fuse	10A	Instrument Panel Cluster (IPC), Body Control Module (BCM), Driver Information Center (DIC), Head Up Display (HUD) Switch
MALL Fuse	10A	Body Control Module (BCM)
MALL PGM Fuse	10A	Body Control Module (BCM)
ONSTAR Fuse	15A	Vehicle Interface Unit (VIU)
PASS - KEY Fuse	10A	Theft Deterrent Control Module
PWR DROP Fuse	10A	Auxillary Power Drop Connector, Vehicle Interface Unit (VIU)
PWR LOCK Fuse	15A	Body Control Module (BCM)
PWR MIR Fuse	10A	Outside Rearview Mirror Switch
PWR WDO Circuit Breaker	25A	Window Switch - Driver, Window Switch - Front Passenger
R DEFOG Fuse	30A	Rear Window Defogger Relay
Radio Fuse	10A	Radio, Vehicle Interface Unit (VIU)
RADIO AMP Fuse	20A	Audio Amplifier, Radio
RAP Fuse	10A	Retained Accessory Power (RAP) Relay
SEAT Circuit Breaker	20A	Seat Adjuster Switch - Driver, Seat Lumbar Vertical Adjuster Relay, Lumbar Horizontal Adjuster Relay
SIR Fuse	15A	Inflatable Restraint Sensing and Diagnostic Module (SDM)
STOP LAMP Fuse	15A	Stoplamp Switch
STR WHL CTRL Fuse	2A	Inflatable Restraint Steering Wheel Module Coil, Steering Wheel Controls - Left
STR WHL ILLUM Fuse	2A	Steering Wheel Controls Switch - Left, Steering Wheel Controls Switch - Right
SUNROOF Fuse	20A	Inside Rearview Mirror, Sunroof Module
TURN Fuse	10A	Turn Signal Switch
WIPER Fuse	25A	Windshield Wiper Motor, Windshield Wiper/Washer Switch

**Fuse Block - IP (Application Table)**