

Fuse Block – Underhood (Application Table)

No.	Fuse/Circuit Breaker	Rating	Description
1	COOL FAN 2 Fuse	30A	COOL FAN Relay, and COOL FAN 2 Relay
2	—	—	Not Used
3	HEADLAMPS Fuse	60A	HVAC HI, PWR MIR, HAZARD, RAP, and PASS-KEY Fuses, and HEADLAMP Circuit Breaker
4	BATT MAIN 2 Fuse	60A	R DEFOG, H SEAT/LUM, PWR LOCK, and RADIO AMP Fuses, and SEAT Circuit Breaker
5	IGN MAIN 1 Fuse	40A	Ignition Switch, Park/Neutral Position (PNP) Switch, BTSI, DRL, CANISTER VENT, PWR DROP, TURN, SIR, IP-IGN, CRUISE, and ECM Fuses
6	COOL FAN 1 Fuse	30A	COOL FAN 1 Relay
7	BATT MAIN 1 Fuse	60A	Ignition Switch, Park/Neutral Position (PNP) Switch, BTSI, DRL, CANISTER VENT, PWR DROP, TURN, SIR, IP-IGN, CRUISE, and ECM Fuses

Fuse Block - Underhood (Application Table) Part 1