

Fuse Block – Underhood (Application Table)

No.	Fuse/Circuit Breaker	Rating	Description
8	IGN MAIN 2 Fuse	60A	Ignition Switch, Retained Accessory Power (RAP) Relay, RADIO, SUNROOF, STR WHL CTRL, WIPER, MALL, MALL PGM, DIC/HVAC, HVAC CTRL Fuses and PWR WDO Circuit Breaker
9	COOL FAN Relay	—	Cooling Fan - Right 3.1L, Cooling Fan - Left 3.8L (During Low Fan Speed Operation)
10	COOL FAN 2 Relay	—	Cooling Fan - Right 3.1L, Cooling Fan - Left 3.8L (During High Fan Speed Operation)
11	IGN MAIN Relay	—	INJ, IGN 1-UH, ELEK IGN, TCC, and A/C Clutch/ABS IGN Fuses
12	COOL FAN 1 Relay	—	Cooling Fan - Left 3.1L, Cooling Fan - Right 3.8L
13	A/C CLU Relay	—	A/C Compressor Clutch Coil, and A/C CLU Diode
14	FUEL PUMP Relay	—	Fuel Pump (FP)
15	—	—	Not Used
16	HORN Relay	—	Horns
17	FOG LAMP Relay	—	Fog Lamp - LF, Fog Lamp - RF
18	INJ Fuse	10A	Fuel Injectors (1 –6)
19	Spare Fuse	15A	Not Used
20	—	—	Not Used
21	IGN1 – UH Fuse	15A	Secondary Air Injection (AIR) Pump Relay, Supercharger Boost Control Solenoid, Heated Oxygen sensor (HO2S) Sensor 1, Heated Oxygen Sensor (HO2S) Sensor 2, Evaporative Emissions (EVAP) Canister Purge Solenoid, Mass Air Flow (MAF) Sensor, and Secondary Air Injection (AIR) Solenoid
22	Spare Fuse	30A	Not Used
23	Spare Fuse	10A	Not Used
24	Spare Fuse	25A	Not Used
25	ELEK IGN Fuse	15A	Ignition Control Module (ICM)
26	Spare Fuse	20A	Not Used
27	B/U LAMP Fuse	10A	Park Neutral Position (PNP) Switch, Body Control Module (BCM), Rear Compartment Lid Release Relay, and Rear Compartment Lid Release Switch
28	A/C CLU/ABS IGN Fuse	10A	A/C Clutch Relay, and Electronic Brake Control Module (EBCM)
29	HVAC/RKE BATT Fuse	10A	HVAC Control Module, Remote Control Door Lock Receiver (RCDLR), Theft LED, and Driver Information Center (W/U40)
30	ALT SENSE Fuse	10A	Generator
31	TCC Fuse	10A	Stoptlamp Switch, 1-2 Shift Solenoid (1-2 SS) Valve, 2-3 Shift Solenoid (2-3 SS) Valve, Torque Converter Clutch (TCC) Solenoid Valve
32	FUEL PUMP Fuse	15A	FUEL PUMP Relay
33	ECM SENSE Fuse	10A	Powertrain Control Module (PCM)
34	—	—	Not Used
35	FOG LP Fuse	10A	FOG LAMP Relay
36	HORN Fuse	15A	Horn Relay
37	PARK LP Fuse	20A	Headlamp Switch, and Vehicle Interface Unit (VIU)
38	—	—	Not Used
39	AIR Fuse	30A	Secondary Air Injection (AIR) Pump Relay

Fuse Block - Underhood (Application Table) Part 2