

Master Electrical Component List

Name	Location
G100	(CKT 50) Right side of the engine compartment, at the base of the battery
G101	(CKT 1350) Left side of the front end upper tie bar, near the headlamp
G111 (3.8L)	(CKT 51) Right side of the engine, on the ignition control module bracket
G113	(CKT'S 50, 451) (and CKT 51 on 3.1L) Lower left front of the engine, on the transaxle stud, near the starter
G117 (3.1L)	(CKT 1050) Lower left front of the engine, on the transaxle stud, above the starter
G117 (3.8L)	(CKT 1050) Lower left front of the engine on transaxle stud, near the starter
G119	(CKT's 250, 1650) Left side of the engine compartment, at the base of the left strut tower
G200	(CKT'S 150, 1450, 1550) Right side of the IP cross beam, behind the fuse block
G201	(CKT 351) Below the IP, on the right side of the steering column, on the steering column support
G205	(CKT's 251, 1751) Left side of the IP, at the base of the steering column
G301	(CKT 750) Inside the left door sill, forward of the left front seat
G302	(CKT 350) Right door sill, forward of the right front seat

G100 - G302