

**Master Electrical Component List**

Name	Location
S105	(CKT 1050) Engine wiring harness, in the front of the engine compartment, approximately 4 cm (2 in) from the C105 (engine coolant fan jumper connector) breakout
S106	(CKT 451) Engine wiring harness, on the left side of the engine compartment, approximately 44 cm (17 in) from the PCM
S109	(CKT 639) Fuel injector wiring harness, on the top of the engine, approximately 2 cm (1 in) from the fuel injector 2 breakout
S115	(CKT 839) Automatic transaxle wiring harness, inside the transaxle housing, approximately 19 cm (7 in) from C113
S121	(CKT 469) Fuel Injector Wiring Harness
S124	(CKT 1350) Forward lamp wiring harness, behind the left headlamp, approximately 30 cm (12 in) from the G101 breakout
S125	(CKT 1650) IP wiring harness, on the left rear of the engine compartment, approximately 7 cm (3 in) from the windshield wiper motor breakout
S131	(CKT 800) Engine wiring harness, on the left side of the engine compartment, approximately 4 cm (2 in) from the EBTCM breakout
S144	(CKT 644) Ignition control module wiring harness, on the top of the engine near the ignition control module, approximately 12 cm (5 in) from the inline connector C110 breakout
S145	(CKT 836) Ignition control module wiring harness, on the top of the engine near the ignition control module, approximately 12 cm (5 in) from the inline connector C110 breakout
S202	(CKT 640) IP harness, behind the center of the IP, approximately 17 cm (7 in) from the data link connector breakout

S105 - S202