

SECURITY AND LOCKS

CARD KEY ID CODE REGISTRATION [ADVANCED KEYLESS SYSTEM]

id0914008071b1

Caution

- Do not place the following devices in the vehicle while programming, otherwise programming cannot be performed.
 - M-MDS
 - Personal computer
 - Device that can send/receive radio waves
- Verify that the other transmitter is not being operated around the servicing area during card key programming.

Note

- Use the M-MDS and start programming if the condition corresponds to the following:
 - One or No Programmed Card Keys
 - Keyless control module is replaced
- If six card keys are already programmed, the programming mode does not activate. If programming is needed, use the M-MDS to erase the unnecessary card key programming.

With two programmed card keys

1. Bring the programmed card keys (2) and a unprogrammed card key into the vehicle.
2. Close all doors.
3. Insert the supplementary key into the ignition key cylinder.

Note

- Complete the procedures up to Step 7 within **30 s** after the supplementary key is inserted.

4. Turn the ignition switch to the ON position.
5. Press the UNLOCK button on card key 1.
6. Press the UNLOCK button on card key 2.
7. From the ignition switch in the ON position, switch the ignition switch in the order indicated below.
 - ACC→ON→ACC→ON→ACC→ON
8. Open the driver-side front door, press the door switch **twice**, and then close the door.

Note

- After Step 3 is completed and the card key programming mode is activated, the door lock actuator operates to lock, and then operates to unlock.
- If the door lock actuator does not operate, repeat the procedure from Step 2.

9. Press the UNLOCK button on the unprogrammed card key **twice**.

Note

- After Step 8 is completed and the card key is programmed, the door lock actuator operates to lock, and then operates to unlock.

10. If programming more card keys, remove the supplementary key once, and then repeat the procedure from Step 2.