


**Fig. 1: Identifying Interior Trim Location (1 Of 3)**  
**MAZDA MOTORS CORP.**

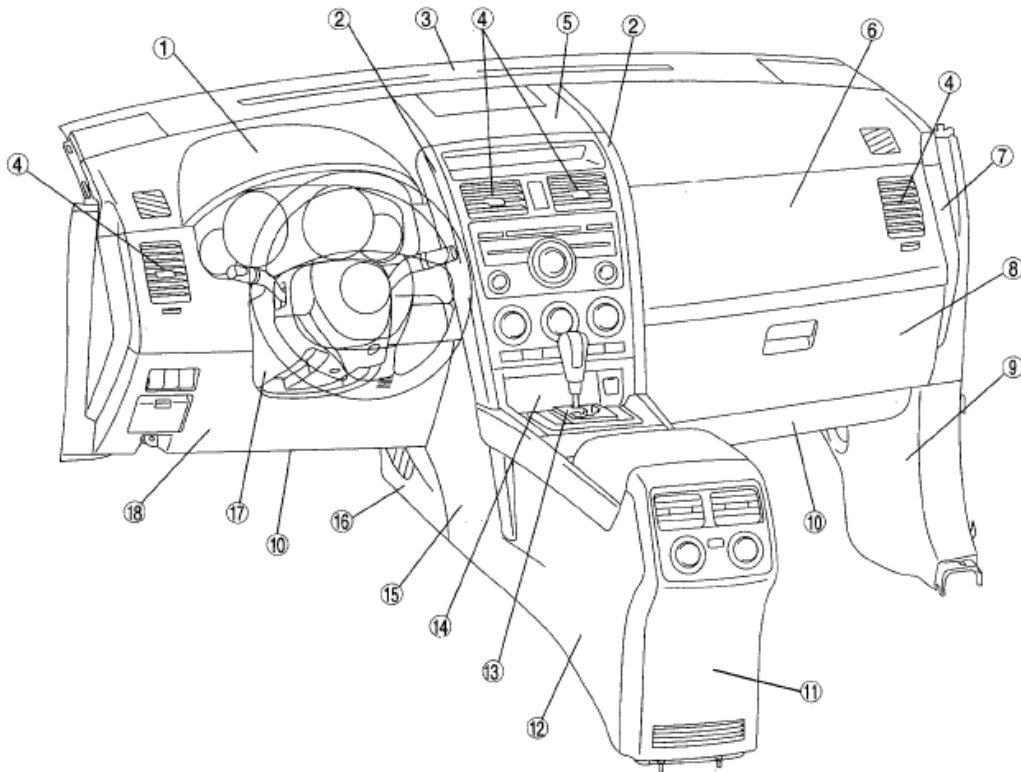

1	Meter hood (See METER HOOD REMOVAL/ INSTALLATION.)
2	Decoration panel (See DECORATION PANEL REMOVAL/ INSTALLATION.)
3	Dashboard (See DASHBOARD REMOVAL/ INSTALLATION.) (See DASHBOARD DISASSEMBLY/ ASSEMBLY.)
4	Ventilator grille (See VENTILATOR GRILLE REMOVAL/ INSTALLATION.)
5	Center panel (See CENTER PANEL REMOVAL/ INSTALLATION.)
6	Dashboard garnish (See DASHBOARD GARNISH REMOVAL/ INSTALLATION.)
7	Side panel (See SIDE PANEL REMOVAL/ INSTALLATION.)
8	Glove compartment (See GLOVE COMPARTMENT REMOVAL/INSTALLATION.)
9	Front side trim (See FRONT SIDE TRIM REMOVAL/ INSTALLATION.)
10	Dashboard under cover (See DASHBOARD UNDER COVER REMOVAL/INSTALLATION.)

11	Console cover (See CONSOLE COVER REMOVAL/ INSTALLATION.)
12	Console (See CONSOLE REMOVAL/ INSTALLATION.) (See CONSOLE DISASSEMBLY/ ASSEMBLY.)
13	Indicator panel (See INDICATOR PANEL REMOVAL/ INSTALLATION.)
14	Front console box (See FRONT CONSOLE BOX MAT REMOVAL/INSTALLATION.) (See FRONT CONSOLE BOX REMOVAL/ INSTALLATION.)
15	Console panel (See CONSOLE PANEL REMOVAL/ INSTALLATION.)
16	Side wall (See SIDE WALL REMOVAL/ INSTALLATION.)
17	Column cover (See COLUMN COVER REMOVAL/ INSTALLATION.)
18	Lower panel (See LOWER PANEL REMOVAL/ INSTALLATION.)