

## 2 WAY LCD REMOTES



**Valet Mode:** If your remote start is not working, you may be in Valet Mode. Your parking lights will also not flash. Your doors will still lock and unlock. To exit Valet Mode, tap the Lock and Trunk buttons or turn the Ignition On and then tap the foot brake 10 times or reprogram your remote(s). Holding the Lock and Trunk buttons for 2.5 seconds will turn your FT-DAS or Shock Sensor on or off.



Tap the Lock Button to lock your doors and/or arm your vehicle. Hold this button for 2.5 seconds to activate Button Lock. "Hold" will flash on the LCD when you press any button. Hold this button for 3.5 seconds to activate panic/vehicle locator.



Tap the Unlock Button to unlock your doors and/or disarm your vehicle.



Hold this button for 2.5 seconds to pop your trunk. If not equipped, ask your Authorized Dealer for details on how to get it.




Hold this button for 2.5 seconds to start your vehicle. Your remote will receive a page back alert and run time countdown timer will start. If enabled, double tapping this button will reset your remote start run time or turbo timer. Status: Tapping this button will activate vehicle status check. The first tap will check temperature inside your vehicle, second, battery voltage and third, remote battery voltage. Repeat and your vehicle will shut off.




Auxiliary 1: Tap the Start Button and then tap the Trunk release button.



 
Auxiliary 2: Tap the Start Button, Press and hold Trunk + Start Buttons for 2.5 seconds and then tap the Trunk Button.



 Tap these two buttons at the same time to turn Valet Mode off. Turn Ignition On and tap buttons to turn on. Hold them for 2.5 seconds to turn your FT-DAS or Shock Sensor on or off.



 Tap these two buttons at the same time to turn the horn or siren chirps on or off.



Tap these two buttons to activate Passive locking/arming. Your system will lock/arm after 30 seconds if enabled. Hold these two buttons for 2.5 seconds to enter the Remote Option Menu.






### START ERROR CODES

PARKING LIGHT FLASHES	REMOTE START ERROR
3 then 1	1: Motor running
3 then 2	2: Key in ignition on position
3 then 3	3: Door open (manual transmission only)
3 then 4	4: Trunk open
3 then 5	5: Foot brake on
3 then 6	6: Hood open
3 then 7	7: Reservation off (manual transmission only)
3 then 8	8: Tach or voltage sensing failure
3 then 9	9: FT-DAS sensor shutdown
3 then 10	10: System is in Valet Mode

To reprogram your remote first cycle the key in the ignition 5 times within 7 seconds. Parking lights will flash. After that tap the Lock button on your remote. Repeat for any additional remotes. If you receive two parking light flashes, your system has exited remote programming mode and you must retry.

Questions/comments? Contact us at 888-820-3690 from 8 AM to 5 PM PST. Also please visit [www.compustar.com](http://www.compustar.com) for a complete user's manual.

### START ERROR CODES

FEATURE	LCD READOUT			FUNCTION/DESCRIPTION
Enter and Exit Menu	Hold Unlock and Trunk Buttons for 2.5 Seconds			Put remote in programming mode. Exits after 20 seconds of inactivity.
Up	Tap the Trunk Button			Moves down the menu
Down	Tap the Start Button			Moves back up the menu
Time	88:88	Adjusts Hour	Adjusts Minute	Sets the current time on your remote. (Not available on all LCD remotes)
Remote Start Time	88:88	Adjusts Hour	Adjusts Minute	Sets the time start. Please check with your installer for additional info.
Alarm Clock Time	88:88	Adjusts Hour	Adjusts Minute	Sets the time in which you would like the remote's alarm clock to alert you.
Alarm Clock		On or Off		This feature turns the alarm clock on or off.
RPS		On or Off		Turns your RPS Touch paging feature on or off.
Vibrate		On or Off		Turns the silent mode on or off.
Temperature	F° / C°	On or Off		Switches between F° and C°.

Register online at [www.compustar.com](http://www.compustar.com) within 10 days of purchase to activate your new remote's warranty.