


2007 ENGINE

Starting System (MZI-3.5) - CX-9

STARTING SYSTEM LOCATION INDEX [MZI-3.5]

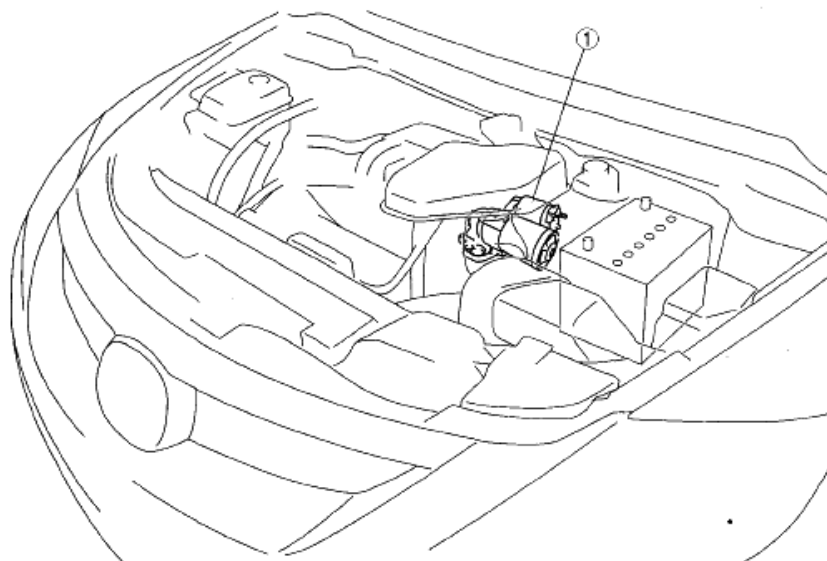

ac9uuw0002163

| | | |
|---|---|--|
| 1 | Starter (See [MZI-3.5].) (See [MZI-3.5].) (See [MZI-3.5].) | STARTER REMOVAL/INSTALLATION STARTER INSPECTION [MZI-3.5]. STARTER DISASSEMBLY/ ASSEMBLY [MZI-3.5]. |
|---|---|--|

Fig. 1: Identifying Starting System Components Location

STARTER REMOVAL/INSTALLATION [MZI-3.5]

WARNING:

- Remove and install all parts when the engine is cold, otherwise they can cause severe burns or serious injury.
- When the battery cables are connected, touching the vehicle body with starter terminal B will generate sparks. This can cause personal injury, fire, and damage to the electrical components. Always disconnect the negative battery cable before performing the following operation.

1. Remove the battery and battery tray. (see **BATTERY REMOVAL/INSTALLATION [MZI-3.5]** .)
2. Position the selector cable out of the way.
3. Remove in the order indicated in the table.
4. Install in the reverse order of removal..

2007 Mazda CX-9 Grand Touring

2007 ENGINE Starting System (MZI-3.5) - CX-9

| | |
|---|------------------------|
| 1 | Wiring harness bracket |
| 2 | Terminal B cable |
| 3 | Terminal S connector |
| 4 | Starter |

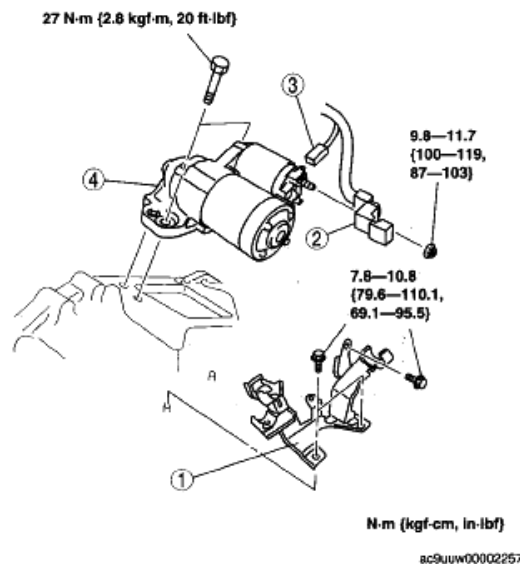


Fig. 2: Identifying Starter Components With Torque Specifications

STARTER INSPECTION [MZI-3.5]

ON-VEHICLE INSPECTION

1. Verify that the battery is fully charged.
2. The starter is normal if it rotates smoothly and without any noise when the engine is cranked.
 - If the starter does not operate, inspect the following:
 - Remove the starter, and inspect the starter unit.
 - Inspect the related wiring harnesses, the ignition switch, and the transaxle range switch.

NO-LOAD TEST


1. Verify that the battery is fully charged.
2. Connect the starter, battery, and a tester as shown in the figure.
3. Operate the starter and verify that it rotates smoothly.
 - If the starter does not rotate smoothly, inspect the starter unit.
4. Measure the voltage and current while the starter is operating.
 - If not within the specification, replace the starter.

Starter no-load test voltage

11 V

Starter no-load test current

90 A or less

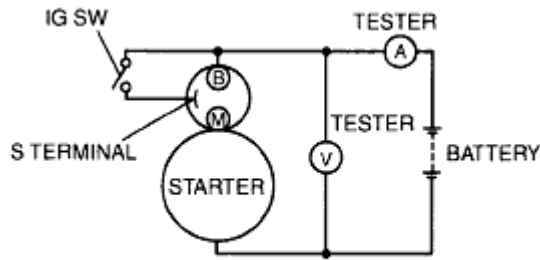

8CXUW00002040

Fig. 3: Starter Circuit Diagram


MAGNETIC SWITCH OPERATION INSPECTION

Pull-out test

NOTE:

- Depending on the battery charge condition, the starter motor pinion may rotate while in an extended state. This is due to current flowing to the starter motor through the pull-in coil to turn the starter motor, and does not indicate an abnormality.

1. Verify that the starter motor pinion is extended while battery positive voltage is connected to terminal S and the starter body is grounded.
 - If the starter motor pinion is not extended, repair or replace the starter.

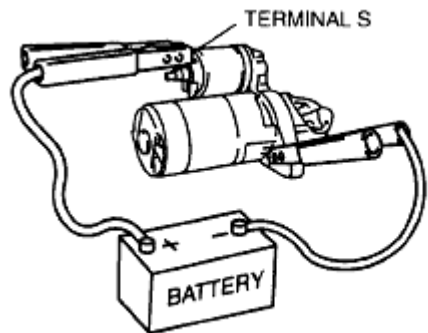


8CXUW00002041

Fig. 4: Connecting Battery Positive Voltage To Terminal S And Ground

Return test

1. Disconnect the motor wire from terminal M.
2. Connect battery positive voltage to terminal M and ground the starter body.
3. Pull out the drive pinion with a screwdriver. Verify that it returns to its original position when released.
 - If it does not return, repair or replace the starter.

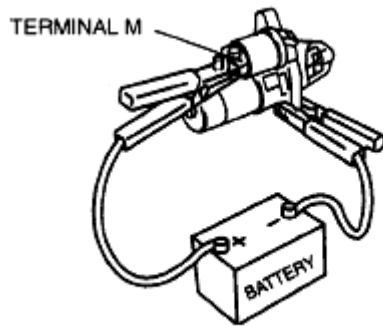

8CXUW00002042


Fig. 5: Connecting Battery Positive Voltage To Terminal M And Ground

PINION GAP INSPECTION

1. Pull out the drive pinion with the battery positive voltage connected to terminal S and the starter body grounded.

CAUTION:

- Applying power for more than 10 s can damage the starter. Do not apply power for more than 10 s.

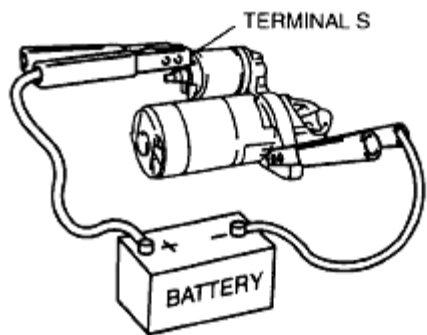


8CXUW00002041

Fig. 6: Connecting Battery Positive Voltage To Terminal S And Grounding Starter Body

2. Measure the pinion gap while the drive pinion is extended.
 - If not as specified, adjust with an adjustment washer (between drive housing front cover and magnetic switch).

Starter pinion gap

0 mm {0 in}

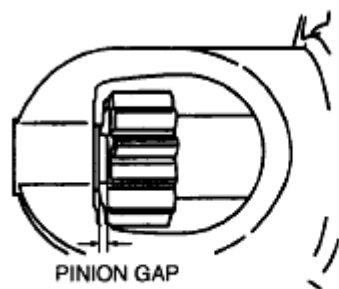

8CXUJW00002043

Fig. 7: Measuring Pinion Gap

STARTER INNER PARTS INSPECTION

Armature


1. Verify that there is no continuity between the commutator and the core at each segment using a tester.
 - If there is continuity, replace the armature.



8CXUJW00002044

Fig. 8: Checking Continuity Between Commutator And Core At Each Segment Using Tester

2. Verify that there is no continuity between the commutator and the shaft using a tester.
 - If there is continuity, replace the armature.

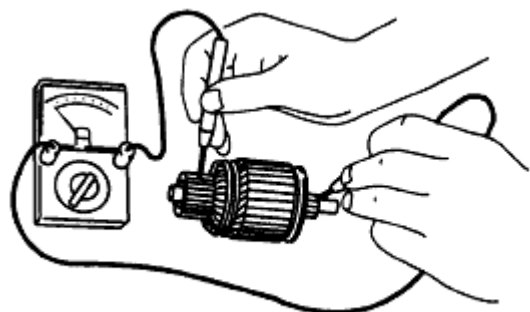

8CXUJW00002045

Fig. 9: Checking Continuity Between Commutator And Shaft Using Tester

3. Place the armature on V-blocks, and measure the runout using a dial indicator.

Starter armature runout

0.1 mm {0.004 in} max.

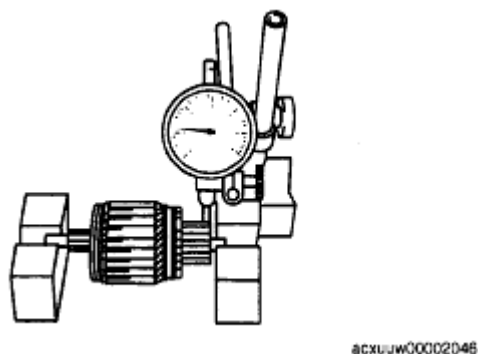


Fig. 10: Measuring Runout Using Dial Indicator

4. Measure the commutator diameter.
 - If not within the minimum specification, replace the armature.

Starter commutator diameter

Standard: 29.4 mm {1.16 in}

Minimum: 28.8 mm {1.13 in}

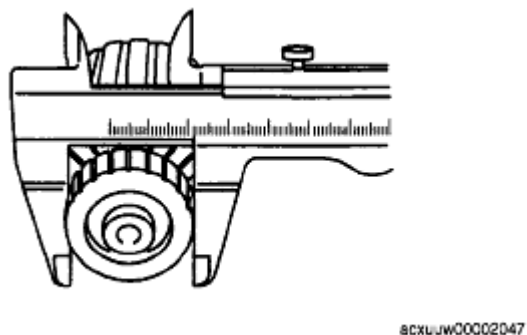



Fig. 11: Measuring Commutator Diameter

5. Measure the segment groove depth of the commutator.
 - If not within the minimum specification, undercut the grooves to the standard depth.

Segment groove depth of starter commutator

Standard: 0.5 mm {0.02 in}

Minimum: 0.2 mm {0.008 in}

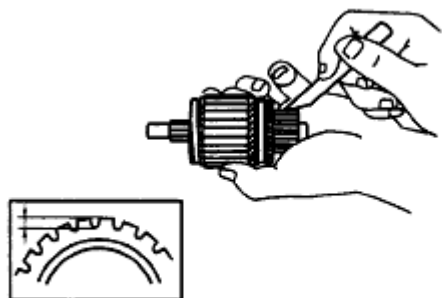


acxuuw00002048

Fig. 12: Measuring Segment Groove Undercut Depth Of Commutator

Magnetic switch

1. Inspect for continuity between terminals S and M using a tester.
 - If there is no continuity, replace the magnetic switch.

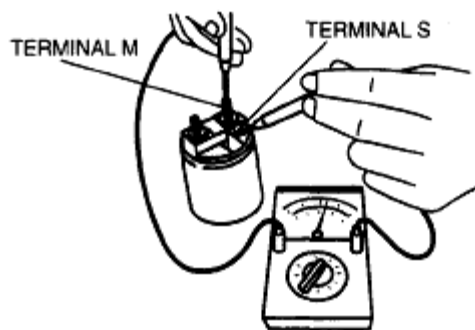

acxuuw00002049

Fig. 13: Inspecting Continuity Between Terminals S And M Using Tester

2. Inspect for continuity between terminal S and the body using a tester.
 - If there is no continuity, replace the magnetic switch.



acxuuw00002050

Fig. 14: Inspecting Continuity Between Terminal S And Body Using Tester

3. Verify that there is no continuity between terminals M and B using a tester.
 - If there is continuity, replace the magnetic switch.

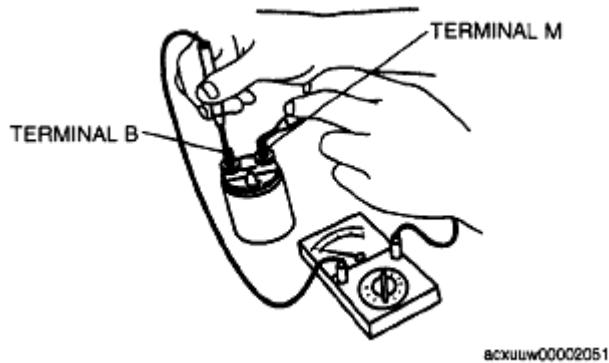


Fig. 15: Checking Continuity Between Terminals M And B Using Tester

Brush and brush holder

1. Verify that there is no continuity between each insulated brush and plate using a tester.
 - If there is continuity, replace the brush holder.




Fig. 16: Checking Continuity Between Insulated Brush And Plate Using Tester

2. Measure the brush length.
 - If any brush is worn almost to or beyond the minimum specification, replace all of the brushes.

Starter brush length

Standard: 12.3 mm {0.48 in}

Minimum: 5.5 mm {0.22 in}

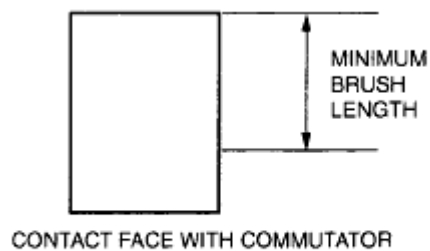

acxuuw00002053


Fig. 17: Identifying Minimum Brush Length

3. Measure the brush spring force using a spring balance.
 - If not within the minimum specification, replace the brush and brush holder component.

Starter brush spring force

Standard: 15.0-20.4 N {1.53-2.08 kgf, 3.38-4.58 lbf}

Minimum: 2.75 N {0.28 kgf, 0.62 lbf}

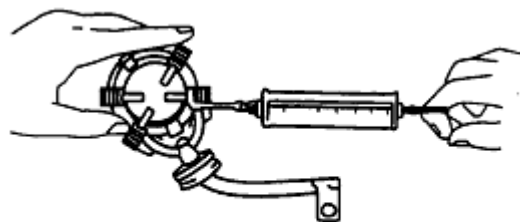

acxuuw00002054


Fig. 18: Measuring Brush Spring Force Using Spring Balance

STARTER DISASSEMBLY/ASSEMBLY [MZI-3.5]

1. Disassemble in the order indicated in the table.
2. Assemble in the reverse order of disassembly.

2007 Mazda CX-9 Grand Touring

2007 ENGINE Starting System (MZI-3.5) - CX-9

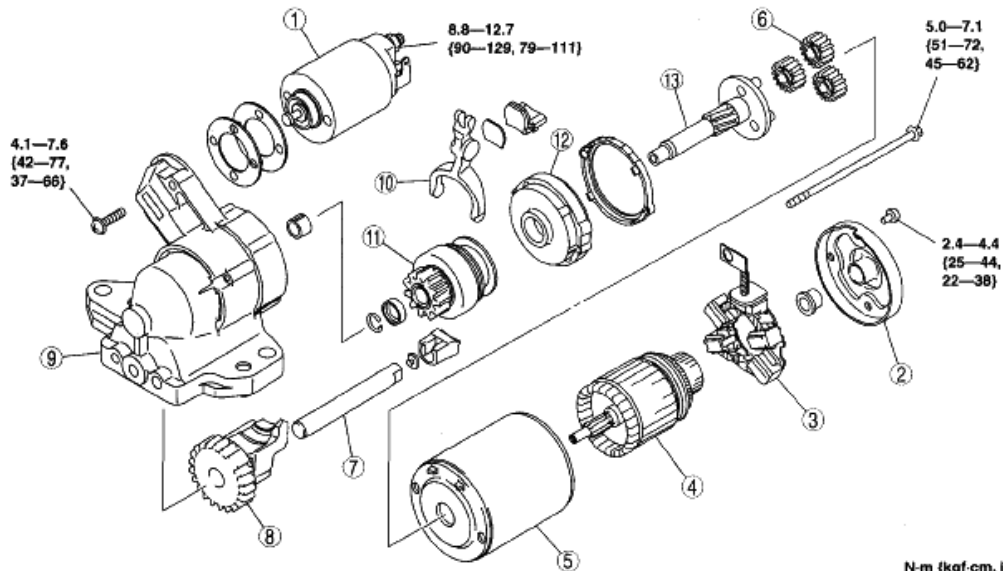

N-m (kgf-cm, in-lbf)

ac9tarw00002165

| | |
|---|------------------------|
| 1 | Magnetic switch |
| 2 | Rear housing |
| 3 | Brush and brush holder |
| 4 | Armature |
| 5 | Yoke |
| 6 | Planetary gear |
| 7 | Pinion shaft |

| | |
|----|---------------|
| 8 | Pinion |
| 9 | Front cover |
| 10 | Lever |
| 11 | Drive pinion |
| 12 | Internal gear |
| 13 | Gear shaft |

Fig. 19: Exploded View Of Starter Components With Torque Specifications